


RIU

Rudder inverter

Operation
and
Installation
manual

V.1 April 2003

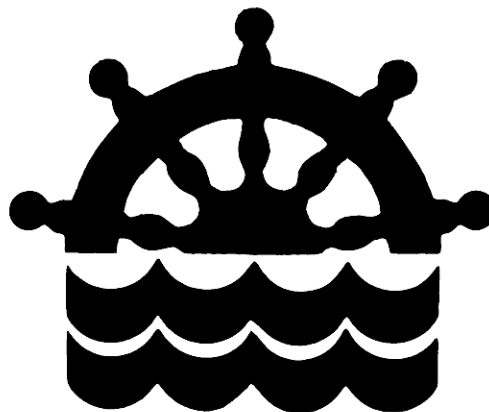

SCAN-STEERING

1. Description.

The rudder inverter are used when a rudder indicator (RVL or RPV) is sharing rudder sensor with other equipment, and the rudder indicator are giving deflection to the wrong side, for example if it's placed in the back of the brigs.

2. Installation.

The Rudder inverter is very easy to install, it just have to be placed in on the wire between the sensor and indicator, as shown on figure 2.

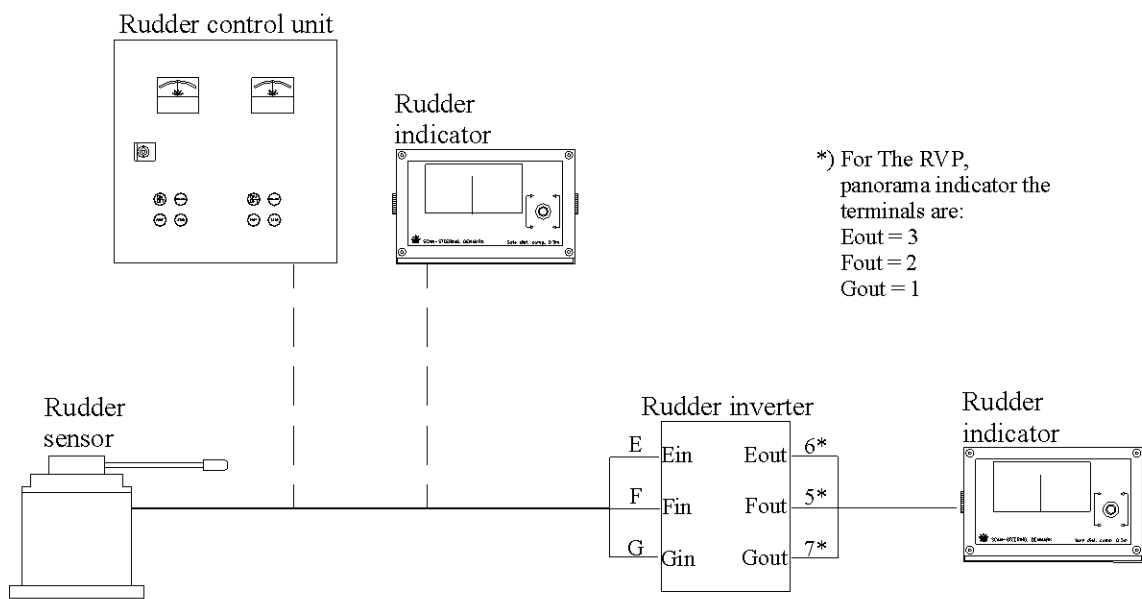


Figure 2.

NOTE.

If your installation diagram shows that only 2 cores are connected to your rudder indicator, please make sure that all 3 cores are connected between the sensor and the inverter.